HOME
DECORATORS
C O L L E C T I O N

HDC# 08048 MFG# TW-18418IY
SOUTHPORT END TABLE 25"Hx21"W x16"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

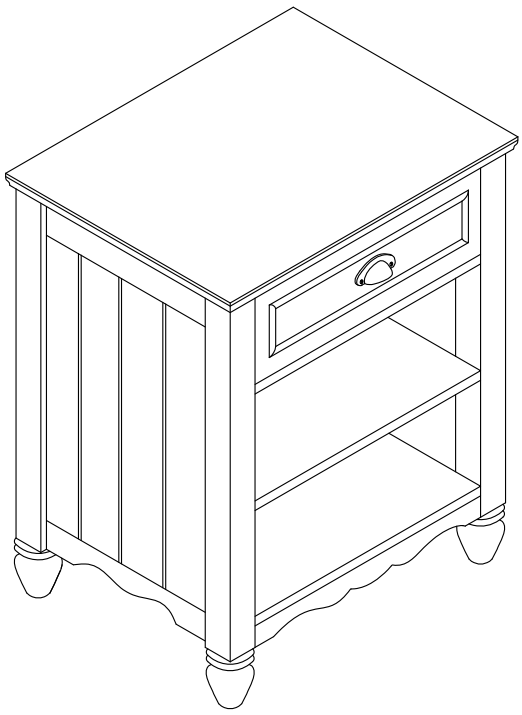

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

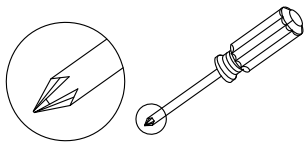

"+"Screw driver

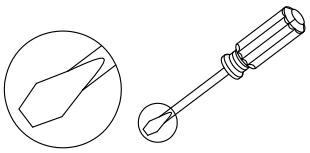

"-"Screw driver

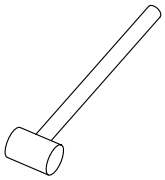

Rubber Mallet

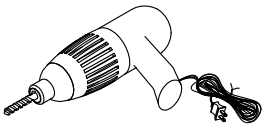

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

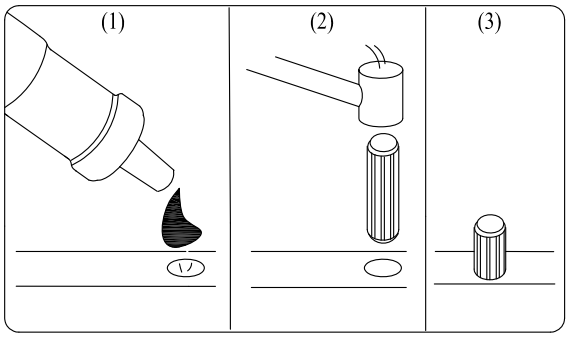

PARTS LIST

BOTTOM PANEL 1 PC 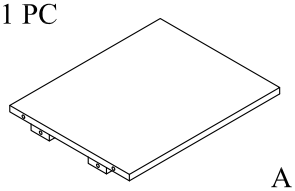 A	ACROSS PANEL 2 PCS 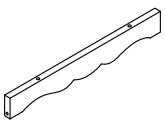 B	LEFT SIDE FRAME 1 PC  C	RIGHT SIDE FRAME 1 PC  D
TABLE TOP 1 PC 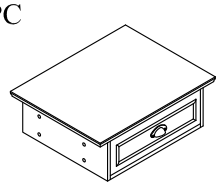 E	SHELF 1 PC  F		

HARDWARE LIST

WOOD DOWEL 8 PCS  (1)	ROUND HEAD BOLT FLAT WASHER 12 SETS (2)	SHELF HOLDER 4 PCS (3)	ALLEN KEY 1 PC  (4)	GLUE 1 PC  (5)	WOOD DOWEL 4 PCS (6)

STEP 1: ASSEMBLE ACROSS PANEL (B) ON BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2)
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ATTACH ACROSS PANEL (B) AND BOTTOM PANEL (A) TOGETHER BY ALLEN KEY (4).

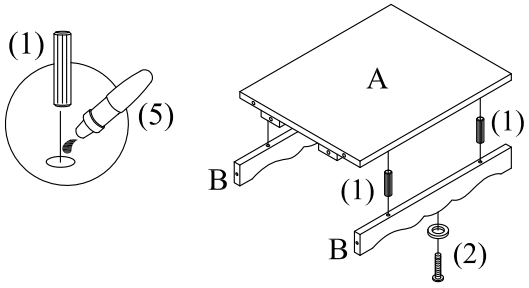

STEP 2: PULL OUT THE DRAWER

- USE FINGER TO PRESS DOWN THE PLASTIC DRAWER STOPPER UNDER THE LEFT AND RIGHT DRAWER, THEN PULL OUT THESE DRAWER AS SHOWN.

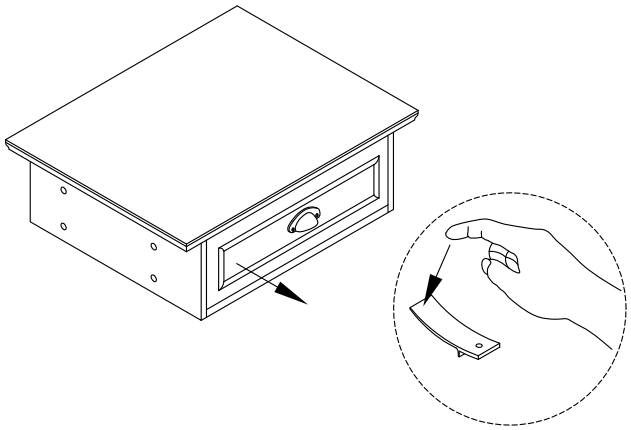

STEP 3: ASSEMBLE SIDE FRAME (C & D) AND TABLE TOP (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) & (6) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ASSEMBLE SIDE FRAME (C & D) AND BOTTOM (A) & TABLE TOP (E) TOGETHER.

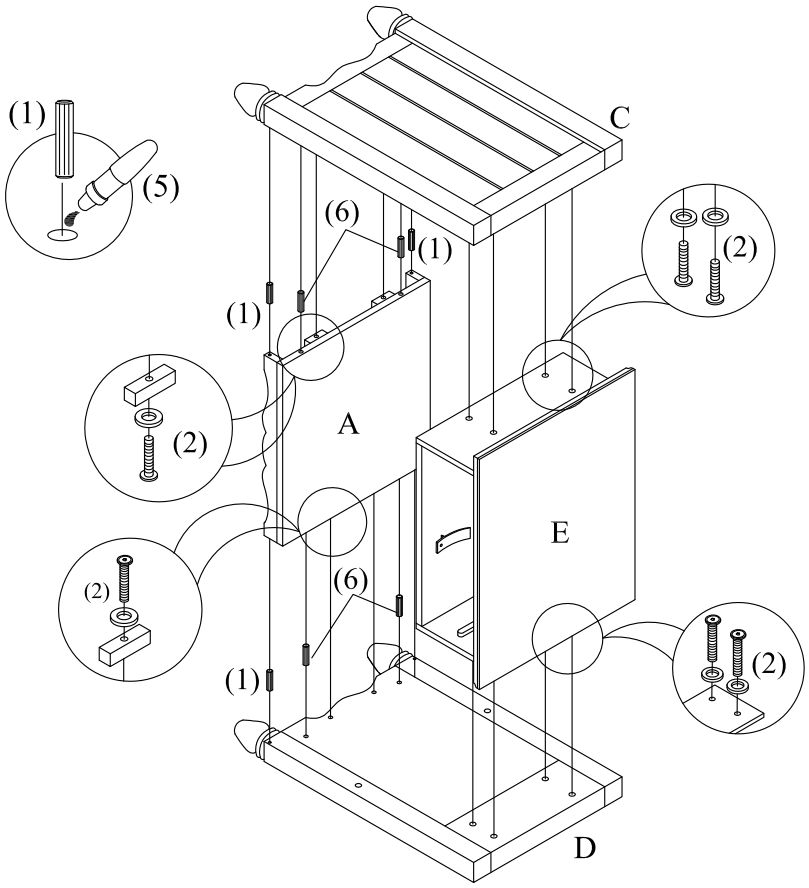

STEP 4: ASSEMBLE SHELF (F) AND PLACE DRAWER

- INSERT SHELF HOLDERS (3) INTO THE HORIZONTAL HOLES INSIDE OF SIDE FRAME (C & D) THEN PUT SHELF (F) ON THE SHELF HOLDERS.
- INSERT DRAWER UNDER THE TABLE TOP (E) AS SHOWN.